

FRESH STICK & BAG

System for impermeable food storage in bags, 30 pcs set

User manual

DESCRIPTION

With this unique fastener system all the following are possible:

- even liquids can be frozen problem-free
- food can be kept fresh and dry
- lunch-packets can be transported cleanly and easily
- food can be warmed-up in hot, non-boiling water
- meals can be warmed-up in the microwave

This 30-part set contains:

- 5 fasteners “Fresh Stick“ size 1 (170 mm long)
- 5 fasteners “Fresh Stick“ size 2 (220 mm long)
- 5 fasteners “Fresh Stick“ size 3 (300 mm long)
- 5 foil bags “Fresh Bag“ size 1 (150 mm x 240 mm)
- 5 foil bags “Fresh Bag“ size 2 (200 mm x 300 mm)
- 5 foil bags “Fresh Bag“ size 3 (280 mm x 400 mm)

HOW TO USE

1. Remove the white, flexible plastic tube of the fastener “Fresh Stick“ by lifting on one side and completely removing from the rail. Lay the empty rail (with the opening for the plastic tube facing upwards) flat on the work surface.
2. Lay the upper, open end of the filled foil bag “ Fresh Bag“ flat, i. e. without folds over the rail. The top edge of the bag should extend min. 2 cm over the edge of the rail.
3. Place the white, flexible plastic tube directly above the empty rail (with the foil bag “ Fresh Bag“ laying on top) and press it down, back inside the rail, beginning at one end and ending at the other end until it is locked in position again. The contents are now safe and sealed, and ready for storage, freezing or transport!
4. Remove the contents of the bag, open the fastener “Fresh Stick“ as described above.

MAINTENANCE AND CLEANING

- Clean by hand under running water or in the dishwasher with normal dishwashing detergents.
- Do not use rough sponges or strong cleaning agents..

Attention!

- Before warming-up your meals in the microwave, remove the fastener “Fresh Stick“ and place the bag either laying or standing, but not folded into the microwave, so that hot air can escape from the foil bag.
- Warming-up without a microwave, just lay the foil bag “Fresh Bag“ in hot, not boiling water und don't fill it with boiling water. Position the fastener “Fresh Stick“ so that it sits on the edge of the saucepan, and only the bag “Fresh Bag“ with the food to be warmed-up sitting in a bath of water.
- Avoid contact with pointed objects such as knives, scissors or animal bones, to prevent damage to your “Fresh Bag“.

TIPS

- For optimum storage results, there should be as little air in the foil bag “Fresh Bag“ as possible when closing the fastener.
- With just the fastener “Fresh Stick“ it is also possible to close originally-packed foods in the form of plastic bags (such as crisps, frozen vegetables, toast, rice, flour and many other) easily and as often as you like.

At Status we carry out the whole life cycle of our products. We take care of development, manufacture, market communication and sales, as well as provide a service centre for our users. We continuously complement our products with the wish to accommodate our users, who are our first and last checkpoint.

We strive to make **Status - kitchen innovations** a brand of high-quality products that are efficient and easy to use. Our range of products includes **products for storing food in vacuum as well as without vacuum, utensils for cooking and preparing food, home equipment products** and others.

Manufacturer: **Status d.o.o. Metlika, Ulica Belokranjskega odreda 19, 8330 Metlika, Slovenia +386 (0)7 36 91 230**

STATUS
innovations